


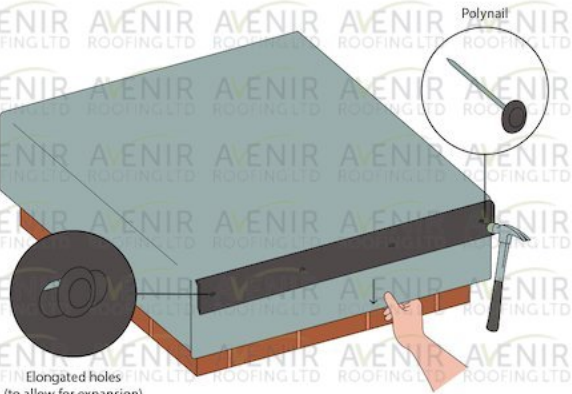


# Gutter Trim

A how-to guide to installing gutter trims to a Techno EPDM flat roof.

	<p><b>Step 1</b></p> <p>Install a 2" x 1" batten to the roof perimeter , level with roof deck.</p>
	<p><b>Step 2</b></p> <p>Install the base plate as shown, 5mm below the deck using plain nails.</p>
	<p><b>Step 3</b></p> <p>Adhere membrane and dress over the base plate.</p>
	<p><b>Step 4</b></p> <p>Pull rubber taut and install top plate as shown, secured with polynails. Please allow a 5mm gap between trims for expansion and contraction.</p>



### Step 5

Trim any excess rubber with a sharp blade.