

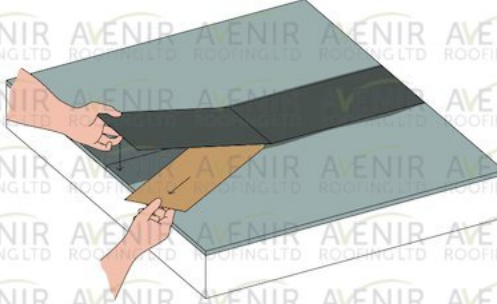



Butt Join

A guide to butting two pieces of adjoining Lineflex Fleece Backed EPDM membranes.

| | |
|---|---|
|  A 3D perspective diagram showing two grey EPDM sheets being laid side-by-side on a white substrate. A hand is shown at the left edge of the first sheet. A vertical double-headed arrow between the sheets indicates an 85mm gap. The background features a repeating watermark of 'AVENIR ROOFING LTD'. | <p>Step 1 Position the Rubber Cover sheets side by side.</p> |
|  A 3D perspective diagram showing a hand applying primer from a white bucket with a blue logo to the surface of the EPDM sheets. A yellow roller is also visible. A vertical double-headed arrow indicates the 85mm width of the primer application. The background features a repeating watermark of 'AVENIR ROOFING LTD'. | <p>Step 2 Apply primer 85mm wide onto each sheet.</p> |
|  A 3D perspective diagram showing a hand applying a black cover tape to the seam between the two EPDM sheets. The tape is being peeled from a brown backing paper. The background features a repeating watermark of 'AVENIR ROOFING LTD'. | <p>Step 3 Position cover tape along the seam area and remove the backing paper at a 45-degree angle.</p> |
|  A 3D perspective diagram showing a hand using a roller to press the two EPDM sheets together, ensuring the cover tape is properly seated. The background features a repeating watermark of 'AVENIR ROOFING LTD'. | <p>Step 4 Thoroughly roller.</p> |