
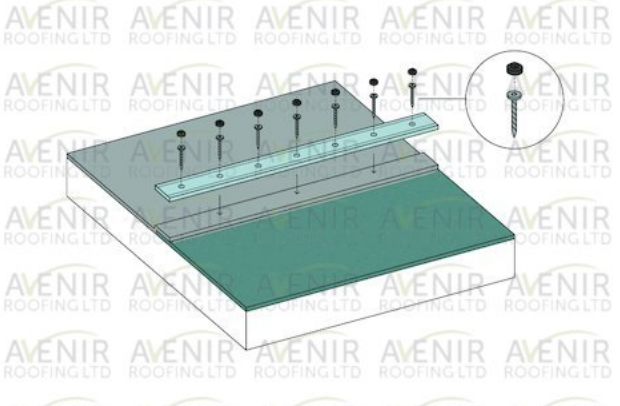
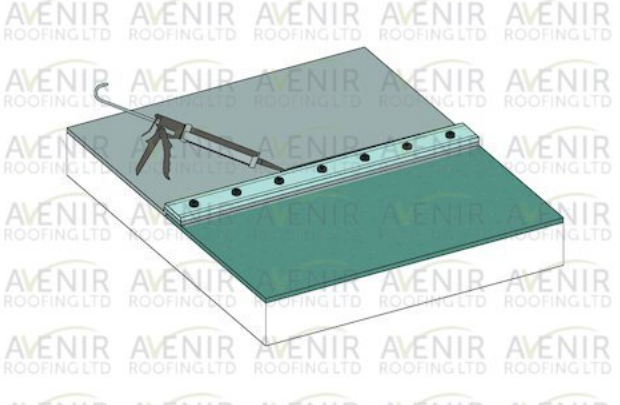


# Felt Join

A guide to joining Lineflex Fleece Backed EPDM membrane to a felt roof.

	<p><b>Step 1</b> Ensure that the receiving felt is clean and dust-free. Apply a thick bead of water block mastic.</p>
	<p><b>Step 2</b> Tightly secure in place with a termination bar and the supplied fixings.</p>
	<p><b>Step 3</b> Trim off excess membrane and seal edge with black mastic.</p>