
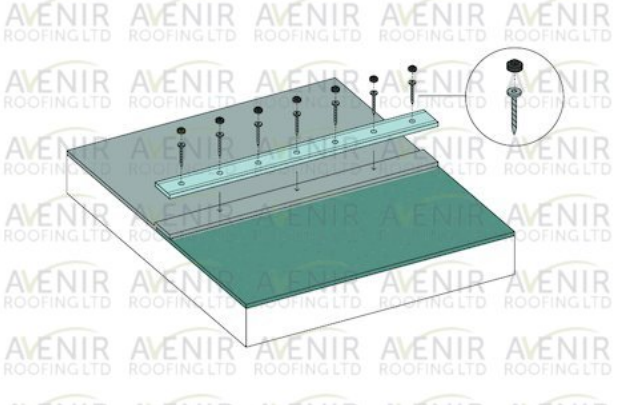
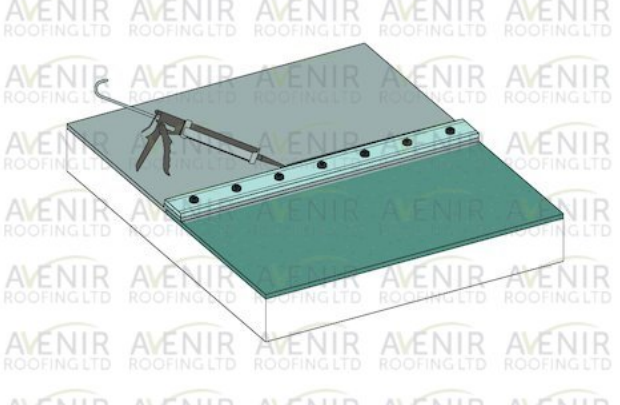


Felt Join

A guide to joining Lineflex Fleece Backed EPDM membrane to a felt roof.

 A 3D perspective diagram showing a green EPDM membrane being laid over a grey felt roof. A black mastic is being applied to the felt surface with a brush. The background is a repeating pattern of the Avenir Roofing Ltd logo.	<p>Step 1</p> <p>Ensure that the receiving felt is clean and dust-free. Apply a thick bead of water block mastic.</p>
 A 3D perspective diagram showing the green EPDM membrane being secured to the felt roof with a metal termination bar and several black fixings. A circular inset shows a close-up of a fixing being driven into the bar. The background is a repeating pattern of the Avenir Roofing Ltd logo.	<p>Step 2</p> <p>Tightly secure in place with a termination bar and the supplied fixings.</p>
 A 3D perspective diagram showing the green EPDM membrane being trimmed with a utility knife. The edge of the membrane is being sealed with black mastic. The background is a repeating pattern of the Avenir Roofing Ltd logo.	<p>Step 3</p> <p>Trim off excess membrane and seal edge with black mastic.</p>