





Onto Tiles

A guide to installing Lineflex Fleece Backed EPDM membrane onto tiles.

 A 3D perspective diagram showing a grey EPDM membrane being laid over a roof of orange tiles. A dimension line indicates a 150mm overhang of the membrane onto the tiles.	<p>Step 1 Allow 150mm overhang onto tiles.</p>
 A 3D perspective diagram showing the EPDM membrane being pushed down so that the lead (the edge of the membrane) fits into the gap between the tiles and the underlying roof deck.	<p>Step 2 Dress lead into place 6" onto tiles, 3" onto the deck. We recommend using minimum 9" Code 4 lead cut into 1200mm lengths max.</p>
 A 3D perspective diagram showing a screw being driven through the EPDM membrane into the roof deck to secure it in place.	<p>Step 3 Fix into position using screws.</p>
 A 3D perspective diagram showing a hand applying a liquid product from a can labeled 'Quick Prime plus' to the lead and rubber edge of the EPDM membrane.	<p>Step 4 Apply Quick Prime plus to lead and rubber approx. 160mm wide using QuickScrubber pad and handle. Allow to go touch dry.</p>

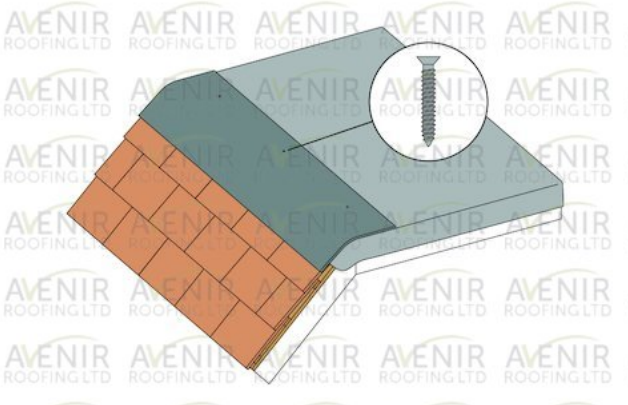

Step 5

Centralize the 6" batten cover strip and carefully remove release paper applying downward pressure. Use a silicone roller to seal.