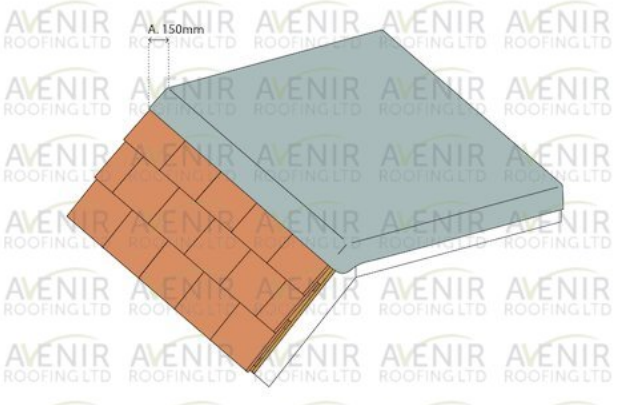

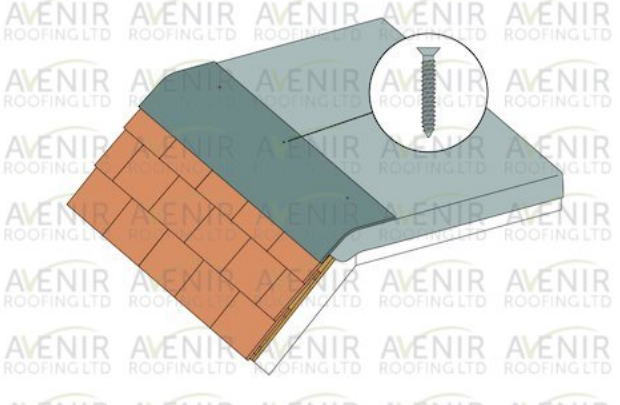

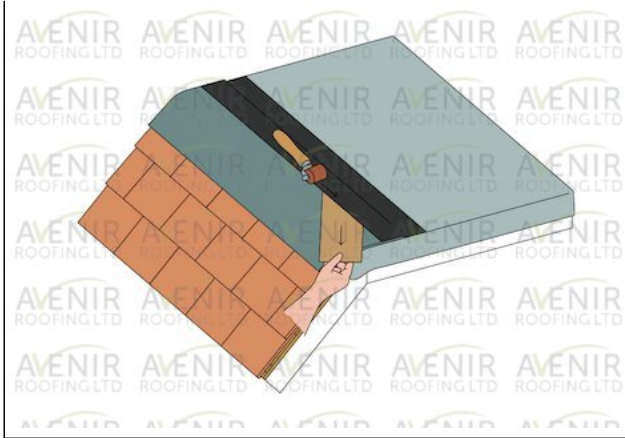


Onto Tiles

A guide to installing Lineflex Fleece Backed EPDM membrane onto tiles.

 <p>The diagram shows a cross-section of a roof with tiles on the left and a grey EPDM membrane on the right. A dimension line indicates a 150mm overhang of the membrane onto the tiles.</p>	<p>Step 1 Allow 150mm overhang onto tiles.</p>
 <p>The diagram shows the lead being installed over the membrane. A dimension line indicates a 6-inch overhang onto the tiles and a 3-inch overhang onto the deck.</p>	<p>Step 2 Dress lead into place 6" onto tiles, 3" onto the deck. We recommend using minimum 9" Code 4 lead cut into 1200mm lengths max.</p>
 <p>The diagram shows a screw being used to secure the lead into the membrane. A circular inset shows a close-up of the screw.</p>	<p>Step 3 Fix into position using screws.</p>
 <p>The diagram shows a hand applying a primer from a can to the lead and rubber. A circular inset shows a close-up of the primer application.</p>	<p>Step 4 Apply Quick Prime plus to lead and rubber approx. 160mm wide using QuickScrubber pad and handle. Allow to go touch dry.</p>



Step 5

Centralize the 6" batten cover strip and carefully remove release paper applying downward pressure. Use a silicone roller to seal.