



Under Tiles

A guide to installing Lineflex Fleece Backed EPDM membrane under tiles.

 A 3D cutaway diagram showing a roof section. The top layer consists of several brown tiles. Below the tiles are wooden battens. A wooden plank is being used to pry up one of the tiles. The bottom layer is a grey felt underlay. The background of the diagram is a repeating watermark of 'AVENIR ROOFING LTD'.	<p>Step 1 Carefully remove tiles and battens and place to one side.</p>
 A 3D cutaway diagram showing the roof section after the tiles and battens have been removed. The grey felt underlay is being folded up over the edge of the roof. The background of the diagram is a repeating watermark of 'AVENIR ROOFING LTD'.	<p>Step 2 Fold the felt underlay up and tuck under existing tiles.</p>
 A 3D cutaway diagram showing the roof section. A green rubber membrane is being applied to the roof surface. A small white bottle of contact adhesive is shown next to the membrane. The background of the diagram is a repeating watermark of 'AVENIR ROOFING LTD'.	<p>Step 3 Apply a thin coat of contact adhesive to the rubber membrane and lay board.</p>
 A 3D cutaway diagram showing the roof section. The green rubber membrane is being mated to the felt underlay. The background of the diagram is a repeating watermark of 'AVENIR ROOFING LTD'.	<p>Step 4 Allow both surfaces to dry and, starting from the bottom, mate together, working the rubber into any angle changes.</p>

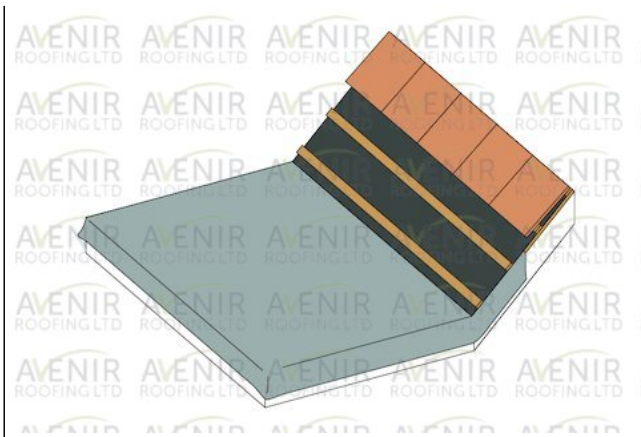

Step 5
Reinstate the felt underlay and battens over the rubber.

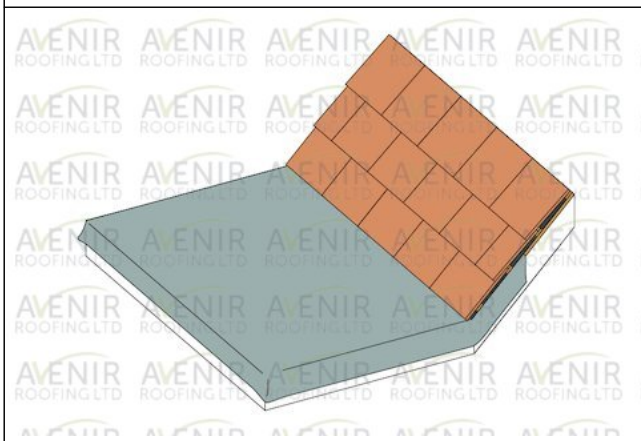

Step 6
Reinstall the tiles.