



Wall Trim Flashing

A guide to installing a wall trim flashing.

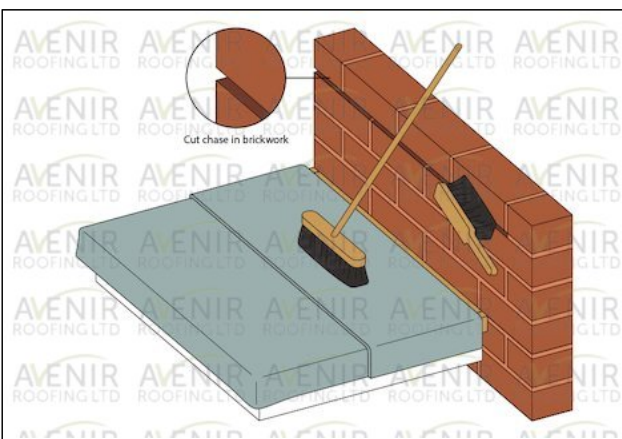


Step 1

Thoroughly clean the wall, chase and rubber.

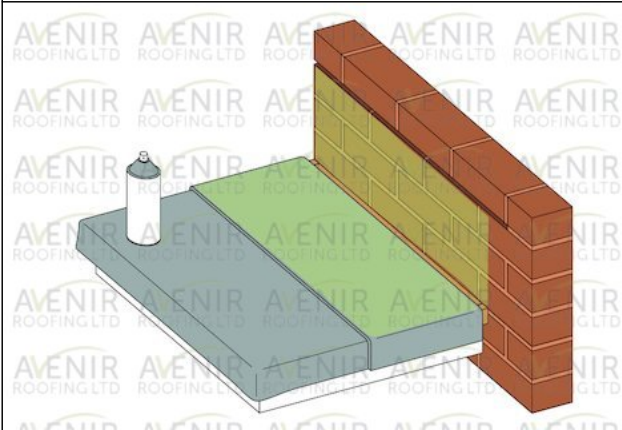


Step 2

Apply a thin coat of contact adhesive to the rubber and the wall.

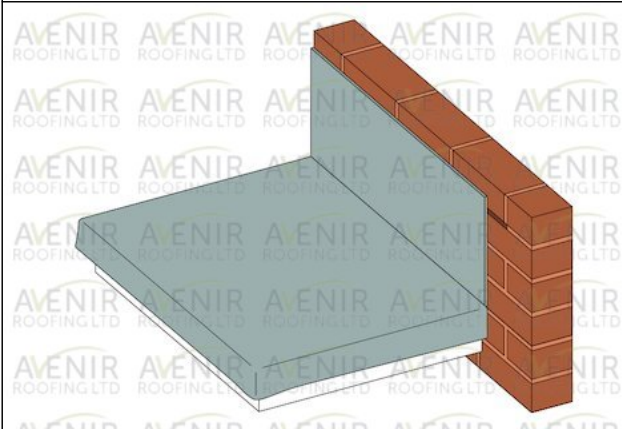





Step 3


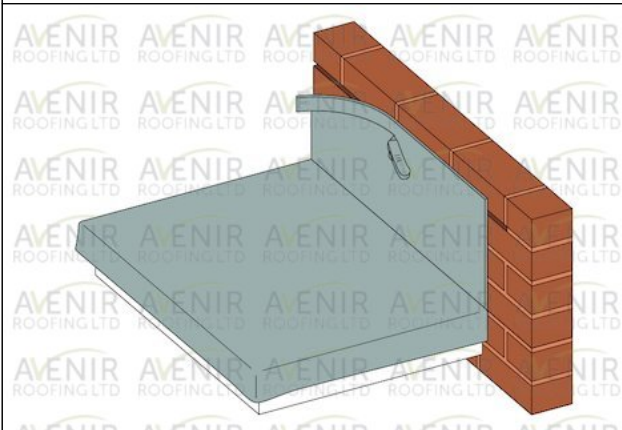
Once touch dry, starting at the bottom, carefully mate the surfaces together. Smooth by hand and silicone roller.



Step 4

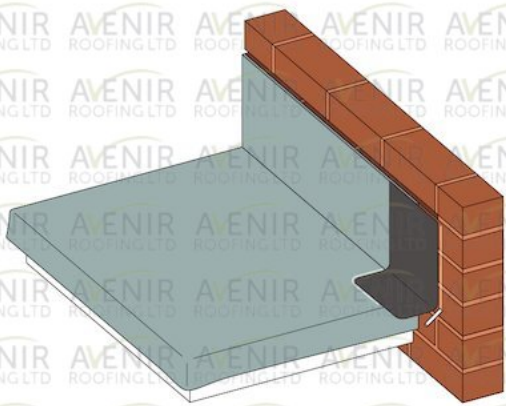
Trim membrane.

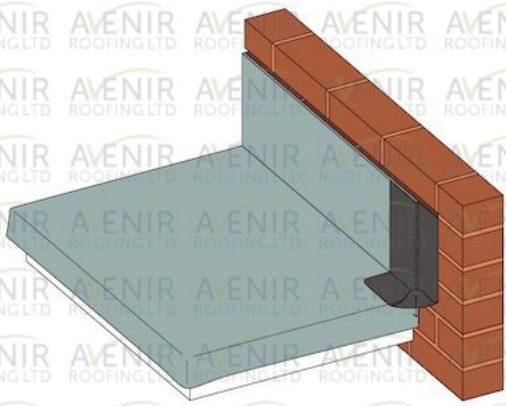	<p>Step 5 Position a piece of 9" QuickSeam Formflash or a Detail Kit as shown and mark the perimeter, allowing an extra 1cm.</p>
	<p>Step 6 Apply Quick Prime plus to the marked area using a Quick Scrubber pad and handle, allow primer to dry.</p>
	<p>Step 7 Peel back a section of backing paper and starting from the top, slowly work downwards as shown.</p>
	<p>Step 8 Apply a gentle heat source to the corner if needed.</p>
	<p>Step 9 Thoroughly roller with Silicone and Penny Rollers.</p>

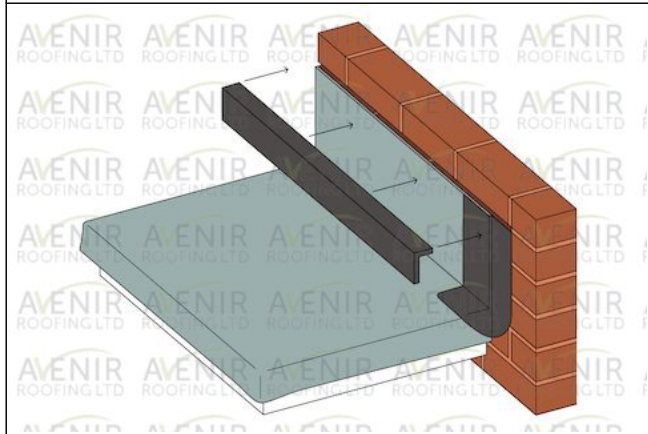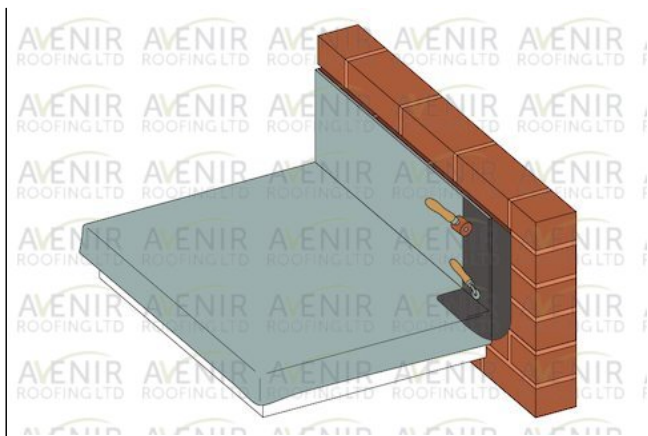

Step 10

Insert wall trim into chase and secure at 600mm centres with the supplied fixings. Raw plugs are not needed if a 5.5mm masonry drill bit is used.

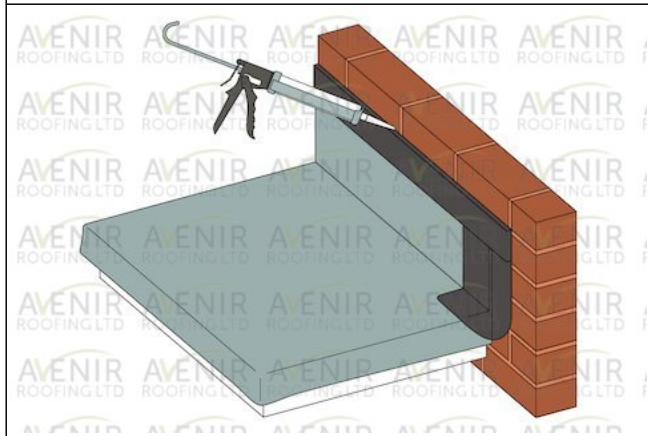

Step 11

Thoroughly seal chase with Wall Mastic.