



# Wall Trim Flashing

A guide to installing a wall trim flashing.

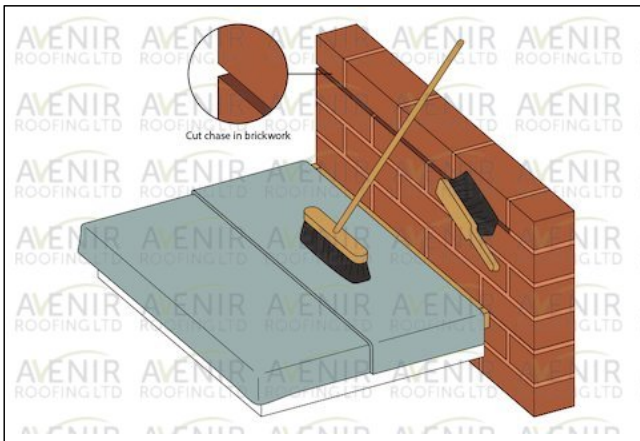


## Step 1

Thoroughly clean the wall, chase and rubber.

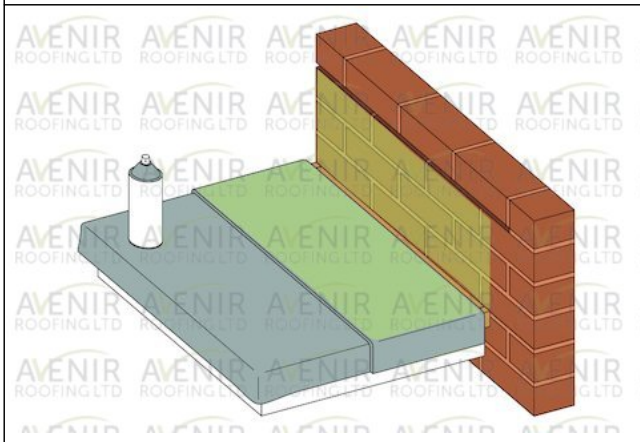


## Step 2

Apply a thin coat of contact adhesive to the rubber and the wall.

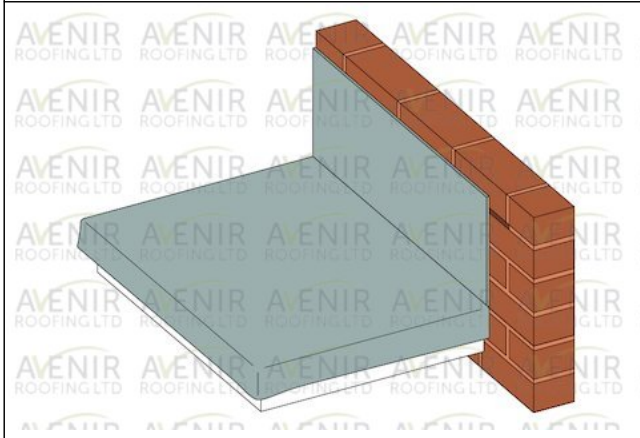


## Step 3

Once touch dry, starting at the bottom, carefully mate the surfaces together. Smooth by hand and silicone roller.

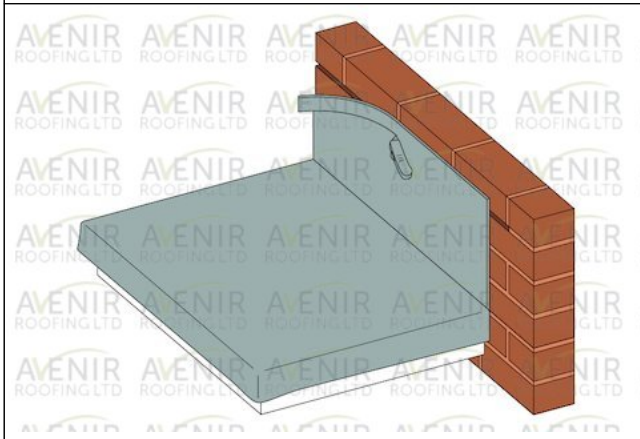

## Step 4

Trim membrane.

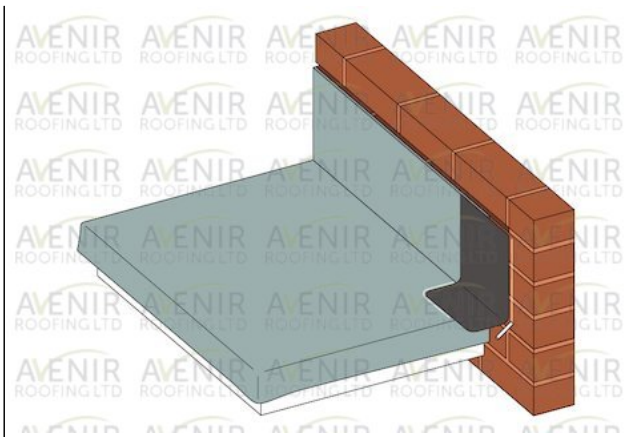


**Step 5**

Position a piece of 9" QuickSeam Formflash or a Detail Kit as shown and mark the perimeter, allowing an extra 1cm.




**Step 6**

Apply Quick Prime plus to the marked area using a Quick Scrubber pad and handle, allow primer to dry.

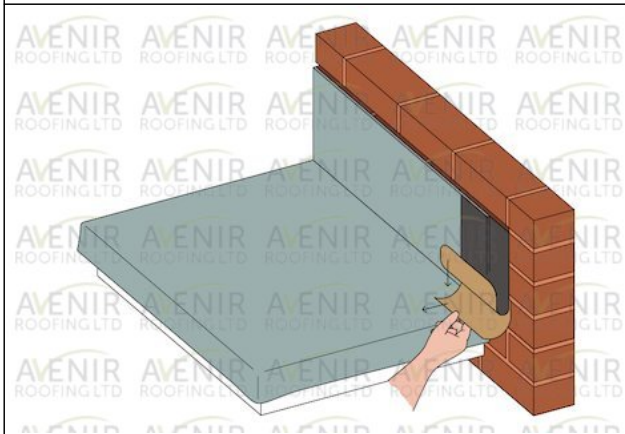

**Step 7**

Peel back a section of backing paper and starting from the top, slowly work downwards as shown.


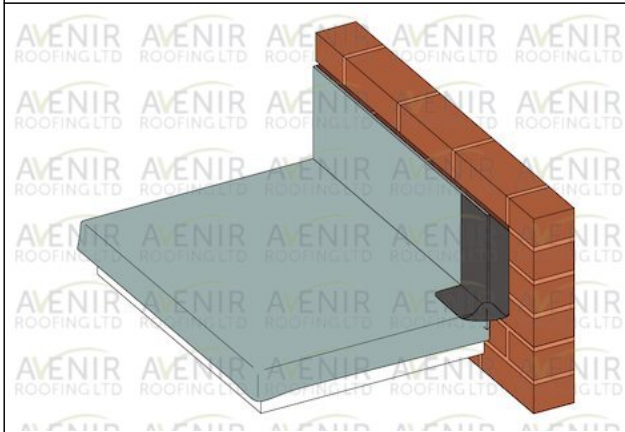


**Step 8**

Apply a gentle heat source to the corner if needed.


**Step 9**

Thoroughly roller with Silicone and Penny Rollers.

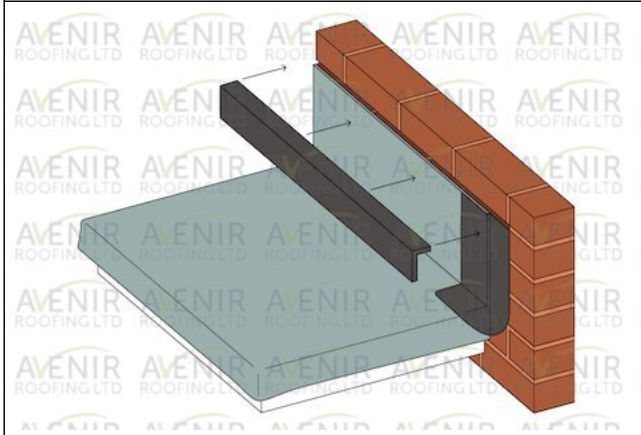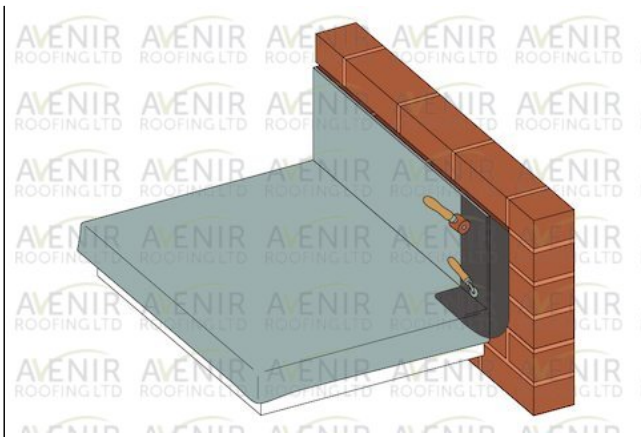

**Step 10**

Insert wall trim into chase and secure at 600mm centres with the supplied fixings. Raw plugs are not needed if a 5.5mm masonry drill bit is used.

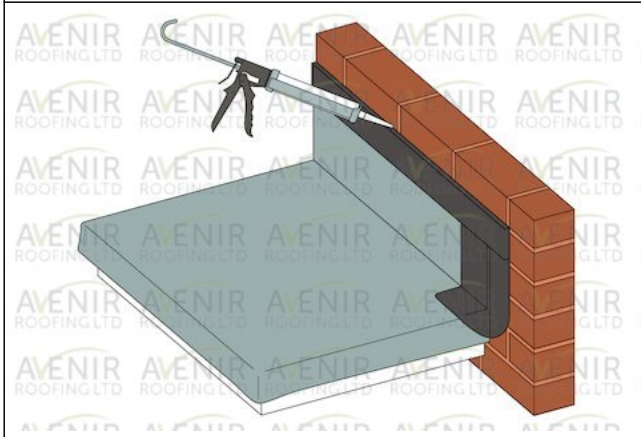

**Step 11**

Thoroughly seal chase with Wall Mastic.