

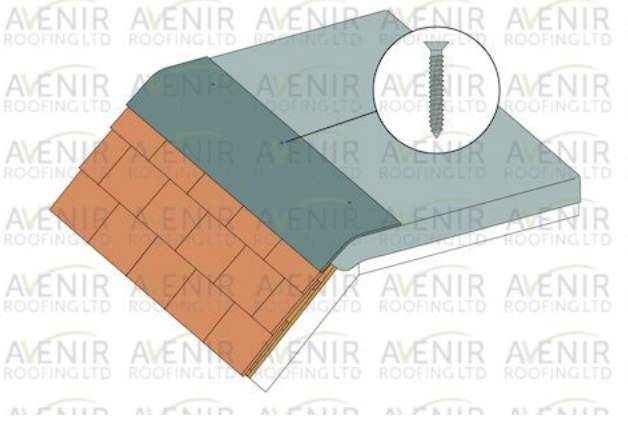

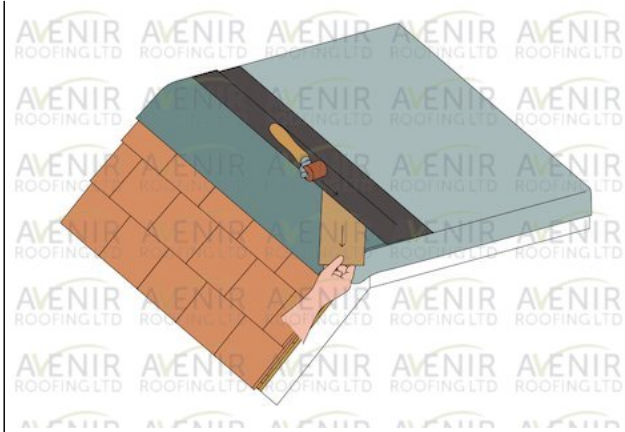


## Onto Tiles

A how-to guide to installing Techno EPDM membrane onto tiles.

 <p>The diagram shows a cross-section of a roof with orange tiles. A grey Techno EPDM membrane is being laid over the tiles. A dimension line indicates a 150mm overhang of the membrane onto the tiles.</p>	<p><b>Step 1</b> Allow 150mm overhang onto tiles.</p>
 <p>The diagram shows the grey membrane being pushed down onto the tiles. Arrows indicate the lead being dressed into place, with 6 inches onto the tiles and 3 inches onto the deck.</p>	<p><b>Step 2</b> Dress lead into place 6" onto tiles, 3" onto the deck. We recommend using minimum 9" Code 4 lead cut into 1200mm lengths max.</p>
 <p>The diagram shows the grey membrane being secured to the tiles with a screw. A circular inset shows a close-up of the screw being driven into the membrane.</p>	<p><b>Step 3</b> Fix into position using screws.</p>
 <p>The diagram shows a hand applying a dark primer from a white bucket to the lead and rubber. A yellow scrubber pad is also shown.</p>	<p><b>Step 4</b> Apply Techno Primer to lead and rubber approx. 160mm wide using a scrubber pad and handle. Allow to go touch dry.</p>



### **Step 5**

Centralize the 6" batten cover strip and carefully remove release paper applying downward pressure. Use silicone roller to seal.