


Rainwater Outlet

A how-to guide to installing a rainwater outlet.




Step 1
Place rainwater outlet through the pre-cut hole and mark around it using a crayon or similar.

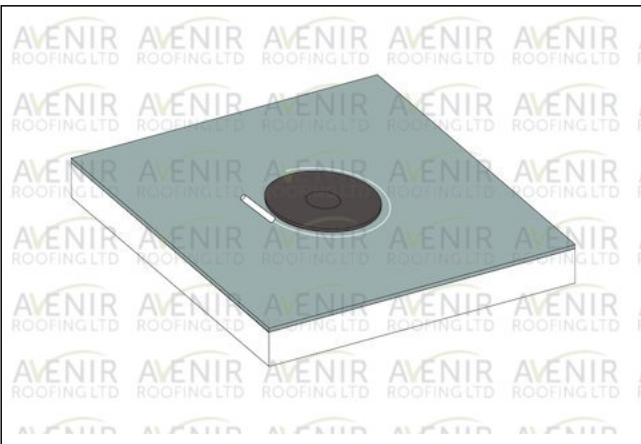

Step 2
Prime the underside of the rainwater outlet and 1cm beyond the marked area on the rubber using a quick scrubber pad and handle. Allow both surfaces to dry.



Step 3
Mate the surfaces together and compress with silicone roller.

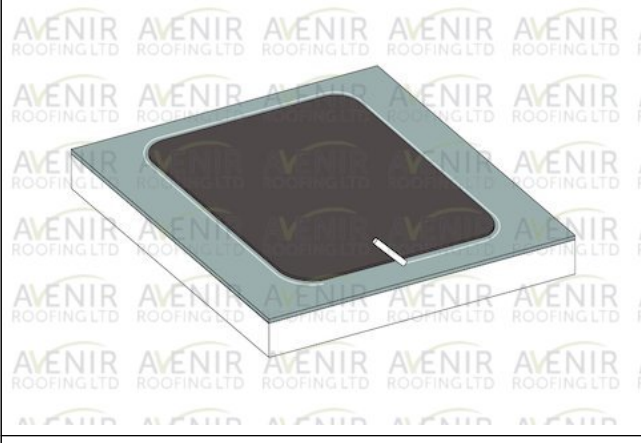

Step 4
Round the corners of the 18" form flash (outlet kit) with scissors and neatly position over outlet. Mark the perimeter with crayon.



Step 5

Prime the rubber and outlet using the quick scrubber pad and handle and extend primer beyond the crayon line by 2cm.



Step 6

Once touch dry, neatly position the 18" form flash and carefully remove the backing paper. Roller firmly in place and use a sharp blade to carefully cut out the hole.