


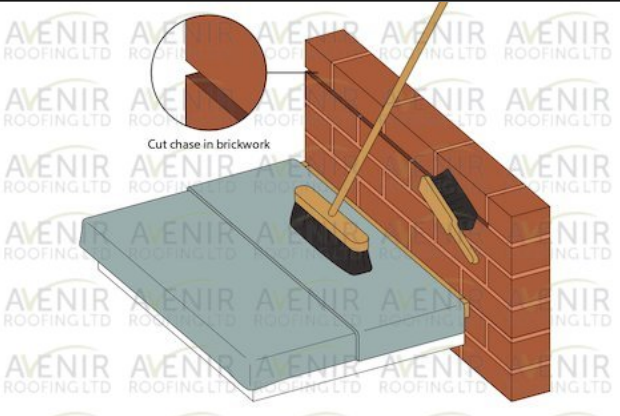


Wall Trim Flashing

A how-to guide to installing a wall trim flashing.

 <p>The diagram shows a cross-section of a brick wall and a grey rubber flashing strip. A circular inset shows a close-up of a 'Cut chase in brickwork' where a groove has been cut into the brick. A brush is shown cleaning the wall and the groove, and a utility knife is shown cutting the rubber strip to fit the width of the wall.</p>	<p>Step 1 Thoroughly clean the wall, chase and rubber.</p>
 <p>The diagram shows a green contact adhesive being applied to the back of the rubber strip and the wall. A small white bottle with a nozzle is shown dispensing the adhesive.</p>	<p>Step 2 Apply a thin coat of contact adhesive to the rubber and the wall .</p>
 <p>The diagram shows the grey rubber strip being pressed onto the wall. A hand is shown smoothing the strip from bottom to top, and a silicone roller is used to ensure a tight seal.</p>	<p>Step 3 Once touch dry, starting at the bottom, carefully mate the surfaces together. Smooth by hand and silicone roller.</p>
 <p>The diagram shows the final installation. The grey rubber strip is now fully attached to the wall, and a white trim membrane is being applied over the top edge of the rubber strip.</p>	<p>Step 4 Trim membrane.</p>




Step 5

Position a piece of 9" QuickSeam Formflash or a Detail Kit as shown and mark the perimeter, allowing an extra 1 cm.




Step 6

Apply Quick Prime plus to the marked area using a Quick Scrubber pad and handle, allow primer to dry.

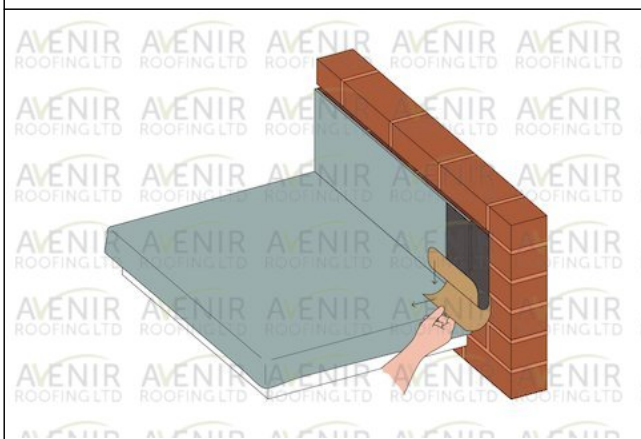

Step 7

Peel back a section of backing paper and, starting from the top, slowly work downwards as shown.

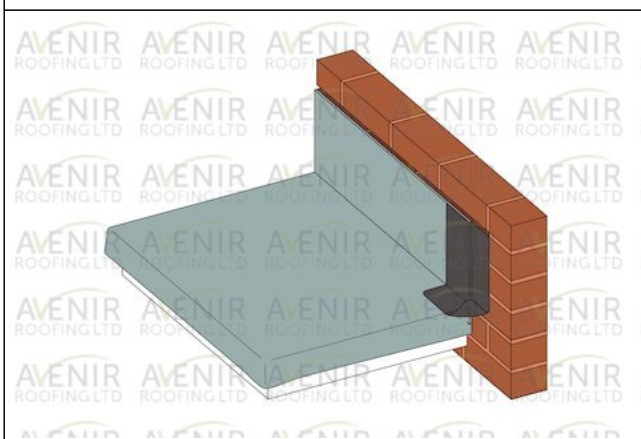


Step 8

Apply a gentle heat source to the corner if needed.



Step 9

Thoroughly roller with Silicone and Penny Rollers.

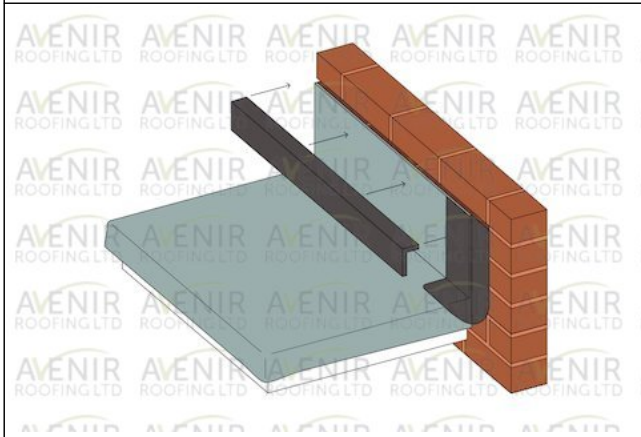

Step 10

Insert wall trim into chase and secure at 600mm centres with the supplied fixings. Rawplugs are not needed if a 5.5mm masonry drill bit is used.



Step 11

Thoroughly seal chase with Wall Mastic.